


Panasonic

Operating Instructions

Digital Cordless Phone

Model No. **KX-TCD200G**

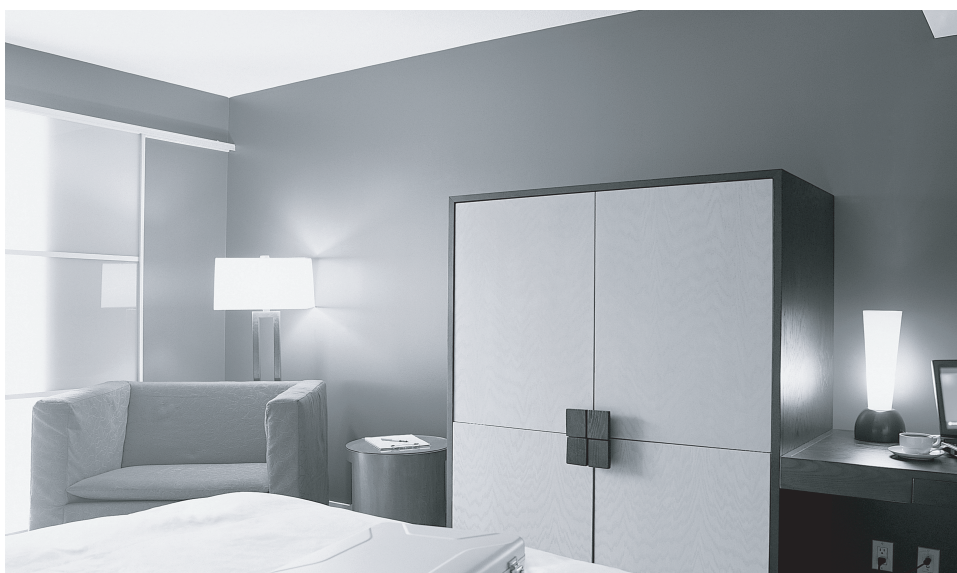

This unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service.

Charge the batteries for about 7 hours before initial use.

Please read these operating instructions before using the unit and save them for future reference.

Introduction

Introduction

Thank you for purchasing a new Panasonic digital cordless phone.

For your future reference

Attach or keep original receipt to assist with any repair under warranty.

Serial No. (found on the bottom of the base unit)

Date of purchase

Name and address of dealer

Hinweis:

- This equipment is designed for use on the Germany analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:

- Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

Contact:

Panasonic Services Europe GmbH

Panasonic Testing Centre

Winsbergring 15, 22525 Hamburg, F.R. Germany

Preparation

Accessory information	4
Important information	5
Controls and displays	6
Connections	7
Battery installation	8
Battery charge	8
Battery replacement	9
Turning the power on/off	9
Setting the date and time	9

Making/Answering Calls

Making calls	10
Answering calls	11

Phonebook

Using the phonebook	13
Copying phonebook entries to other handsets	15

Handset Settings

Guide to handset settings	16
Time settings	17
Ringer setup	17
Night mode	17
Display setup	19
Call options	19
Other options	20

Base Unit Settings

Guide to base unit settings	21
Ringer setup	22
Call options	23
Other options	25

Caller ID Service

Using Caller ID service	26
Caller list	26

Multi-unit Operation

Operating additional units	28
Registering a handset to a base unit	28
Intercom between handsets	30
Transferring calls between handsets	30

Useful Information

Wall mounting	31
Available character entries	32
Troubleshooting	34
Specifications	37
Guarantee	38
Free Troubleshooting	39
End-User Hotline for Use-related and General Queries	40

Index


Index	41
-----------------	----

Preparation


Accessory information

Included accessories

AC adaptor
PQLV19CE

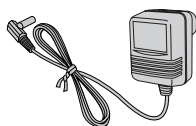


Telephone line cord



Rechargeable batteries
AAA (R03) size
HHR-4EPT



Handset cover

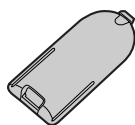

Operating instructions



Additional/replacement accessories

Model No.	Description
P03P	2 rechargeable nickel metal hydride (Ni-MH) batteries
KX-TCA120EX	Additional Digital Cordless Handset
KX-A272	DECT repeater

Preparation

Important information

General

- Use only the AC adaptor included with this product, noted on Seite 4.
- Do not connect the AC adaptor to any AC outlet other than a standard 220–240 V AC outlet.
- This product is unable to make calls when:
 - The portable handset battery(ies) need recharging or have failed.
 - There is a power failure.
 - The key lock feature is turned on.
 - The call bar feature is turned on (only phone numbers stored in the unit as emergency numbers can be called).
- Do not open the base unit or handset other than to replace the battery(ies).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

Environment

- Do not use this product near water.
- This product should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the unit and is easily accessible.

Warnung:

- To prevent the risk of electrical shock, do not expose this product to rain or any other type of moisture.
- Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has

stopped and contact an authorised service centre.

Location

- For maximum distance and noise-free operation, place your base unit:
 - Away from electrical appliances such as TVs, radios, personal computers or other phones.
 - In a convenient, high and central location.

Battery caution


- We recommend using the battery(ies) noted on Seite 4. **Use only rechargeable battery(ies).**
- Do not mix old and new batteries.
- Do not dispose of the battery(ies) in a fire, as they may explode. Check local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte from the battery(ies) is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery(ies). Do not allow conductive materials such as rings, bracelets or keys to touch the battery(ies), otherwise a short circuit may cause the battery(ies) and/or the conductive material to overheat and cause burns.
- Charge the battery(ies) in accordance with the information provided in these operating instructions.
- Only use the included base unit (or charger) to charge the battery(ies). Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the battery(ies) to swell or explode.

Preparation

Controls and displays

Controls

Handset

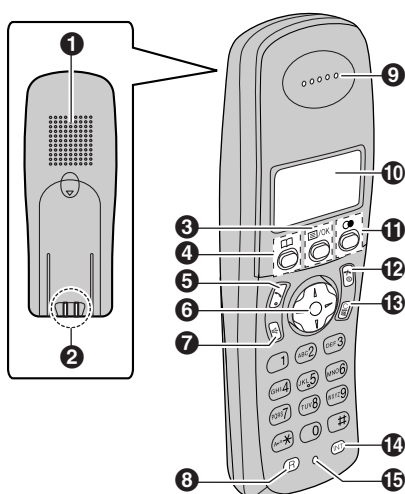


- 1** Speaker
- 2** Charge contact
- 3** [≡/OK] (Menu/OK)
- 4** [□] (Phonebook)
- 5** [↶] (Talk)
- 6** Navigator key
 - [▲][▼]: To search for the desired item in menus.
 - [▶]: To select the desired item or move the cursor to the right.
 - [◀]: To return to the previous screen or move the cursor to the left.
- 7** [☎] (Speakerphone)
- 8** [R] (Recall)
- 9** Receiver
- 10** Display
- 11** [●] (Redial/Pause)
- 12** [⏻] (Off/Power)
- 13** [C/⊗] (Clear/Mute)
- 14** [INT] (Intercom)
- 15** Microphone

Hinweis:

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

Base unit

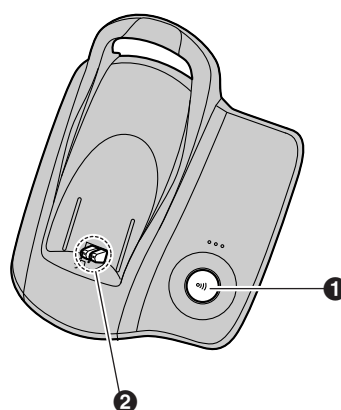

- 1** [↔] (Page)
- 2** Charge contact

Displays

Display icons

Various icons appear on the handset display to indicate the current status of the unit.


Display icon	Meaning
	Within range of a base unit • When flashing: Handset is searching for base unit. (out of range of base unit, handset is not registered to base unit, no power on base unit)
	Handset is accessing base unit. (intercom, paging, changing base unit settings, etc.)
	Handset is on an outside call.
	Call bar is on. (Seite 19)
	Battery strength

Preparation

Display icon	Meaning
[VE]	Voice enhancer is set to high or low tone. (Seite 11)
[N]	Night mode is on. (Seite 18)
[X]	Key lock is on. (Seite 11)
[2]	Handset number: The left icon shows handset 2 example. (Seite 19)
-2-	Base unit number: The left icon shows base unit 2 example. (Seite 19)
[Besetzt]	Line is being used by another handset.

Connections

When the AC adaptor is connected, a short beep will be heard. If it is not heard, check the connections.

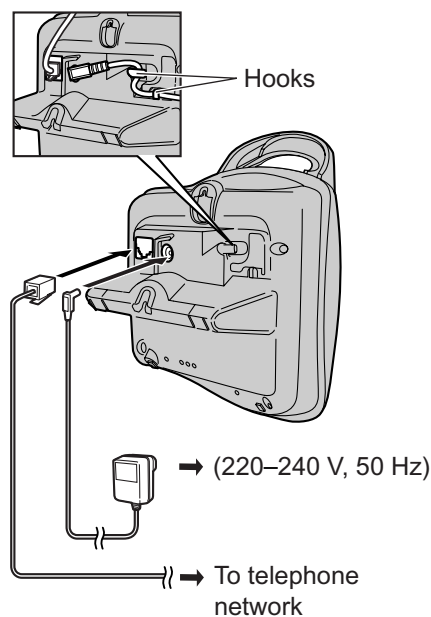

Wichtig:

- Use only the AC adaptor and telephone line cord supplied with this unit.


Hinweis:

- After connection, you must charge the batteries to make or answer calls (Seite 8).
- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.


Preparation

Battery installation

- 1 Insert the batteries negative (⊖) terminal first.

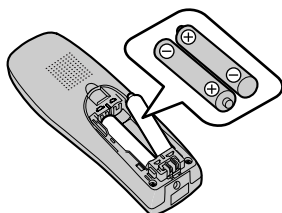

- 2 Close the handset cover.

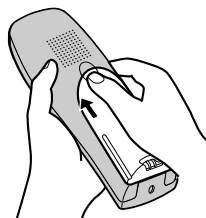


Hinweis:

- Use only rechargeable batteries (Seite 4).


Battery charge

Place the handset on the base unit for about 7 hours before initial use.

When charging, the battery icon is shown as follows.



When the batteries are fully charged,  remains on the display.

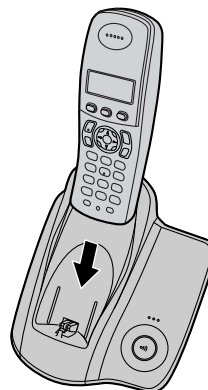

Hinweis:

- It is normal for the handset to feel warm during charging.
- It takes 7 hours to fully charge the batteries, however, you can use the handset before the batteries are fully charged.
- Clean the charge contacts (Seite 6) of the handset and base unit with a soft, dry cloth once a month, otherwise the batteries may not charge properly. Clean more often if the unit is exposed to grease, dust or high humidity.

Battery strength

Battery icon	Battery strength
	High
	Medium
	Low When flashing: Needs to be charged.

Hinweis:

- When  flashes, recharge the handset batteries.  will continue to flash until the batteries have been charged for at least 15 minutes.
- If the handset is turned off, it will be turned on automatically when it is placed on the base unit.

Preparation

Battery life

After your Panasonic batteries are fully charged, you can expect the following performance:

Ni-MH batteries (700 mAh)

Operation	Operating time
While in use (talking)	20 hours max.
While not in use (standby)	170 hours max.

Hinweis:


- Actual battery performance depends on a combination of how often the handset is in use (talking) and how often it is not in use (standby).
- Battery operating time may be shortened over time depending on usage conditions and ambient temperature.

Battery replacement

If  flashes even after the handset batteries have been charged for 7 hours, the batteries must be replaced.

Wichtig:

- We recommend the use of Panasonic rechargeable batteries noted on Seite 4. If you install non-rechargeable batteries and start charging, the batteries may leak electrolyte.
 - Do not mix old and new batteries.
- 1 Press the notch on the handset cover firmly and slide it in the direction of the arrow.

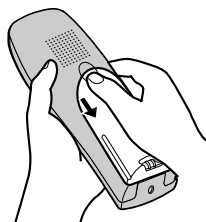

- 2 Remove the old batteries positive (+) terminal first and install the new ones. See Seite 8 for battery installation.

Turning the power on/off

Power on

Press  for about 1 second.

- The display will change to the standby mode.

Power off

Press  for about 2 seconds.

- The display will go blank.

Setting the date and time

Wichtig:

- Confirm that the AC adaptor is connected.
- Ensure that  is not flashing.

- 1 Press /OK].
- 2 Select "Mobilteileinst.", then press .
- 3 Select "Zeiteinstell.", then press .
- 4 Select "Datum/Uhr eing.", then press .
- 5 Enter the current day, month and year by selecting 2 digits for each.
Beispiel: 17 May, 2005
Press .
- 6 Enter the current hour and minute by selecting 2 digits for each.
• You can select "AM", "PM" or 24-hour time entry by pressing  repeatedly.
Beispiel: 3:30 PM
Press , then press  repeatedly until "03:30 PM" is displayed.
- 7 Press /OK].
- 8 Press .

Hinweis:

- To correct a digit, press  or  to move the cursor, then make the correction.
- The date and time may be incorrect after a power failure. In this case, set the date and time again.

Making/Answering Calls

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **[C/⊗]**, then enter the correct number.
- 2 Press **[↶]**.
- 3 When finished talking, press **[⏏]** or place the handset on the base unit.

Speakerphone

The handset features a digital speakerphone, which allows you to have hands-free conversations.

- 1 During a conversation, press **[⏏]** to turn on the speakerphone.
 - Speak alternately with the caller.
- 2 When finished talking, press **[⏏]** or place the handset on the base unit.

Hinweis:

- For best performance, please note the following:
 - Use the speakerphone in a quiet environment.
 - If you or the other party have difficulty hearing each other, press **[▲]** or **[▼]** repeatedly to adjust the speaker volume as necessary.
- To switch back to the receiver, press **[↶]**.

To adjust the receiver or speaker volume

Press **[▲]** or **[▼]** while talking. 4 volume levels are available for the receiver. 6 levels are available for the speaker.

Redial feature

Previously dialled phone numbers (each 24 digits max.) can be redialled.

To redial the last number dialled

Press **[☎]**, then press **[↶]** or **[⏏]**.

Hinweis:

- You can also press **[↶]** or **[⏏]** before pressing **[☎]**.

To make a call using the redial list

The last 10 phone numbers dialled are stored in the redial list.

- 1 Press **[☎]**.
 - The last number dialled will be displayed.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number.
 - To exit the list, press **[⏏]**.
- 3 Press **[↶]** or **[⏏]**.

To edit a number in the redial list before calling it

- 1 Press **[☎]**.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number, then press **[⏏/OK]**.
- 3 Select **"Bearb. & Anrufen"**, then press **[▶]**.
- 4 Press **[◀]** or **[▶]** to move the cursor, then edit the number.
 - Place the cursor on the number you wish to erase, then press **[C/⊗]**.
 - Place the cursor to the right of where you want to insert a number, then press the appropriate dial key.
- 5 Press **[↶]** or **[⏏]**.

To erase numbers in the redial list

- 1 Press **[☎]**.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number, then press **[⏏/OK]**.
- 3 Select **"Löschen"**, then press **[▶]**.
 - If you want to erase all numbers in the list, select **"Alle löschen"**, then press **[▶]**.
- 4 Select **"Ja"**, then press **[▶]**.
- 5 Press **[⏏]**.

To store a number from the redial list into the phonebook

- 1 Press **[☎]**.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number, then press **[⏏/OK]**.
- 3 Select **"Telbuch hinzuf."**, then press **[▶]**.
- 4 Enter a name (16 characters max.; see Seite 32 for character entry), then press **[⏏/OK]**.
- 5 Edit the phone number if necessary, then press **[⏏/OK]**.

Making/Answering Calls

- 6 Select the desired category (Seite 13), then press [▶].
- 7 Select "Speichern", then press [▶].
- 8 Press [⌘].

Other features

Voice enhancer

You can change the tone quality of the receiver while you are on a call. 3 settings are available.

- 1 Press [≡/OK] during a call.
- 2 Select the desired setting, then press [▶].

Hinweis:

- If you select "Höhen" or "Tiefen", "[VE]" is displayed.

Mute

You can mute your voice during a conversation. While mute is turned on, you will be able to hear the other party, but the other party will not be able to hear you.

- 1 To mute your voice, press [C/⌘].
- 2 To return to the conversation, press [C/⌘] again.

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press [≡/OK] for about 2 seconds.

- "[x]" is displayed.
- To turn key lock off, press [≡/OK] for about 2 seconds.

Hinweis:

- Calls to emergency numbers (Seite 23) cannot be made until key lock is turned off.
- Key lock is turned off when the handset is turned off.

R button (to use the recall feature)

[R] is used to access special telephone services, such as call waiting. If your telephone line supports call waiting, you can press [R] to switch between the first and second caller during a

conversation. Contact your service provider for details.

Hinweis:

- If your unit is connected to a PBX (private branch exchange), pressing [R] can allow you to access certain features of your host PBX such as transferring an extension call. Consult your PBX dealer for details.
- You can change the recall time (Seite 23).

Pause button (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service.

Example: If you have to dial [0] before dialling outside numbers manually, you will probably pause after dialling [0] until you hear a dial tone.

- 1 Press [0].
- 2 Press [⏸].
- 3 Dial the phone number, then press [↶] or [↷].

Hinweis:

- Pressing [⏸] 1 time creates 1 pause. Press [⏸] repeatedly to create longer pauses. To change pause length, see Seite 23.

Answering calls


- 1 Lift the handset and press [↶] or [↷] when the unit rings.
 - You can also answer a call by pressing any dial key from [0] to [9], [✱], [#], or [INT].
- (Any key answer feature)
- 2 When finished talking, press [⌘] or place the handset on the base unit.

Auto talk feature

You can answer calls simply by lifting the handset off the base unit. You do not need to press [↶]. To turn this feature on, see Seite 19.

To adjust the ringer volume when an outside call comes in

Press [▲] or [▼] when an outside call comes in.



Making/Answering Calls

Hinweis:






- The ringer volume cannot be adjusted if the handset is on the base unit.

Other features

Handset locator

Using this feature, you can locate the handset if it has been misplaced.

- 1 Press **[📞]** on the base unit.
 - The base unit will page the handset for about 1 minute.
- 2 To stop paging, press **[📞]** on the base unit or press **[🔍📞]** on the handset.



Using the phonebook

The phonebook allows you to make calls without having to dial manually. You can add 20 names and phone numbers to the phonebook, assign each phonebook entry to the desired category, and search for phonebook entries by name or category.

Adding entries to the phonebook

- 1 Press [□], then press [≡/OK].
- 2 Select "Neuer Eintrag", then press [▶].
- 3 Enter the party's name (16 characters max.; see Seite 32 for character entry), then press [≡/OK].
- 4 Enter the party's phone number (24 digits max.), then press [≡/OK].
- 5 Select the desired category for the entry, then press [▶].
- 6 Select "Speichern", then press [▶].
- 7 Press [✕].

Hinweis:

- If there is no space to store new entries, "Speicher Voll" will be displayed. Erase unnecessary entries (Seite 14).

To edit/correct a mistake

Press [◀] or [▶] to place the cursor on the number or character you wish to erase, then press [C/✕]. Place the cursor to the right of where you want to insert a number or character, then press the appropriate dial key.

Hinweis:

- Press and hold [C/✕] to erase all numbers or characters.

Categories

Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook you can assign it to the desired category. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by category. Additional category features are available for Caller ID subscribers (Seite 26).

Changing category names

- 1 Press [□], then press [≡/OK].
- 2 Select "Kategorie", then press [▶].
- 3 Select the category you want to change the name of, then press [▶].
- 4 Select "Kategorie Name", then press [▶].
- 5 Edit the name (10 characters max.; see Seite 32 for character entry), then press [≡/OK].
- 6 Press [✕].

Finding and calling a phonebook entry

Phonebook entries can be searched for by first character, by category, or by scrolling through all phonebook entries.

Once you have found the desired entry, press [↶] or [↷] to dial the phone number.

Scrolling through all entries

- 1 Press [□].
- 2 Press [▲] or [▼] repeatedly to display the desired entry.

Searching by first character (index search)

- 1 Press [□], then press [●].
- 2 Select "Stichwort Suche", then press [▶].
- 3 Select the character entry mode that contains the character you are searching for, and press [▶].
- 4 Press the dial key ([0] to [9]) which contains the character you are searching for (Seite 32).
 - Press the same dial key repeatedly to display the first entry corresponding to each letter located on that dial key.
 - If there is no entry corresponding to the letter you selected, the next entry will be displayed.
- 5 Press [▲] or [▼] repeatedly to scroll through the phonebook if necessary.

Searching by category

- 1 Press [□], then press [●].

Phonebook

- 2 Select "**Kategoriesuche**", then press [▶].
- 3 Select the category you want to search, then press [▶].
 - The first entry in that category is displayed.
 - If you select "**Alle**", the unit will end the category search.
- 4 Press [▲] or [▼] repeatedly to scroll through the phonebook if necessary.

Editing entries in the phonebook

Phonebook entries can be edited after you have saved them. You can change the name, phone number, and category.

Changing a name, phone number, category

- 1 Find the desired entry (Seite 13), then press [≡/OK].
- 2 Select "**Editieren**", then press [▶].
- 3 Edit the name if necessary (16 characters max.; see Seite 32 for character entry), then press [≡/OK].
- 4 Edit the phone number if necessary (24 digits max.), then press [≡/OK].
- 5 Select the desired category, then press [▶].
- 6 Select "**Speichern**", then press [▶].
- 7 Press [✕⓪].

Erasing entries from the phonebook

Erasing an entry

- 1 Find the desired entry (Seite 13), then press [≡/OK].
- 2 Select "**Löschen**", then press [▶].
- 3 Select "**Ja**", then press [▶].
- 4 Press [✕⓪].

Erasing all entries

- 1 Press [□], then press [≡/OK].
- 2 Select "**Alle löschen**", then press [▶].
- 3 Select "**Ja**", then press [▶].
- 4 Select "**Ja**" again, then press [▶].
- 5 Press [✕⓪].

One touch dial

Assigning an entry in the phonebook to a one touch dial key

Dial keys [1] to [9] can each be used as a one touch dial key, allowing you to dial a number from the phonebook by simply pressing a dial key.

- 1 Find the desired entry (Seite 13), then press [≡/OK].
- 2 Select "**Kurzwahl**", then press [▶].
- 3 Press [▲] or [▼] to select the desired dial key number, then press [▶].
 - When the dial key is already used as a one touch dial key, "*" is displayed next to the dial key number. If you select this dial key, "**Überschreiben**" is displayed. You can overwrite the previous assignment if necessary.
 - If you do not wish to overwrite, select "**Zurück**".
- 4 Select "**Speichern**", then press [▶].
- 5 Press [✕⓪].

Making a call using a one touch dial key

- 1 Press and hold the desired one touch dial key ([1] to [9]).
 - You can view other one touch dial assignments by pressing [▲] or [▼].
- 2 Press [↶] or [↷].

Erasing a one touch dial assignment

- 1 Press and hold the desired one touch dial key ([1] to [9]).
- 2 Press [≡/OK], then press [▶].
- 3 Select "**Ja**", then press [▶].

Hinweis:

- Only the one touch dial assignment is erased. The corresponding phonebook entry is not erased.

Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that

Phonebook

you have stored in the phonebook, without having to dial manually.

- 1 While on a call, press [□].
- 2 Press [▲] or [▼] repeatedly to select the desired entry.
 - To search by first character (index search), see Seite 13. To search by category, see Seite 13.
- 3 Press [▶] to dial the number.

Copying phonebook entries to other handsets

Phonebook entries (Seite 13) can be copied from the handset to the phonebook of a compatible Panasonic handset.

Copying one entry

- 1 Find the desired entry (Seite 13), then press [≡/OK].
- 2 Select **"Kopieren"**, then press [▶].
- 3 Enter the handset number you wish to send the phonebook entry to.
- 4 To continue copying another entry, select **"Ja"**, then press [▶]. Find the desired entry, then press [▶].
 - To finish copying, select **"Nein"**, then press [▶].
- 5 Press [✕○].

Copying all entries

- 1 Press [□], then press [≡/OK].
- 2 Select **"Alle kopieren"**, then press [▶].
- 3 Enter the handset number you wish to send the phonebook entries to.
 - When all entries have been copied, **"Abgeschlossen"** is displayed.
- 4 Press [✕○].

Hinweis:

- If the other handset (the receiver) is not in standby mode, **"Fehlgeschlagen"** is displayed on your handset (the sender).
- If copying failed after copying at least 1 entry, **"Unvollständig"** is displayed on your handset (the sender).

Handset Settings

Guide to handset settings

For your reference, a chart of all items which can be customised for the handset is printed below.

- When customising the handset, the current item or setting is indicated by ►.

Handset settings menu	Sub-menu	Sub-menu 2	Default setting	Page
Zeiteinstell.	Datum/Uhr eing.		—	Seite 9
	Alarm		Aus	Seite 17
Ruftoneinstell.	Ruflautstärke		Maximum	Seite 17
	Rufsignal ext.		Klingeltöne 1	Seite 17
	Rufsignal int.		Klingeltöne 1	Seite 17
	Nachtmodus	Start/Ende	23:00/06:00	Seite 18
		Ein/Aus	Aus	Seite 18
		Rufverzögerung	60 Sek	Seite 18
		Kateg. Auswähl.	—	Seite 18
Display-Einst.	Display Anzeige		Aus	Seite 19
	Auswahl Sprache		Deutsch	Seite 19
	Kontrast		Level 3	Seite 19
Rufoptionen	Wahlsperre		Aus	Seite 19
	Autom. Gespräch		Aus	Seite 19
Registrierung	Mobilt. registr.		—	Seite 28
Auswahl Basis	—		Automatisch	Seite 29
Andere Optionen	Mobilteil-PIN		0000	Seite 20
	Tastentöne		Ein	Seite 20
	MT zurücksetzen		—	Seite 20

Hinweis:

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

Handset Settings

Time settings

Alarm

An alarm will sound for 3 minutes at the set time once or daily. Set the date and time beforehand (Seite 9).

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Zeiteinstell.", then press [▶].
- 4 Select "Alarm", then press [▶] 2 times.
- 5 Select an alarm mode, then press [▶].
 - "Einmalig": The alarm will sound once at the set time. Enter the desired day and month by selecting 2 digits for each.
 - "TäglWiederholen": An alarm will sound daily at the set time.
 - "Aus": Turns the alarm off. Press [▶] again, then press [X] to finish.
- 6 Enter the desired hour and minute by selecting 2 digits for each.
 - You can select "AM", "PM" or 24-hour time entry by pressing [*] repeatedly.
- 7 Press [OK].
- 8 Select the ringtone that will sound at the set time, then press [▶].
- 9 Select "Speichern", then press [▶].
- 10 Press [X].

Hinweis:

- To stop the alarm, press any dial key.
- When in talk or intercom mode, the alarm will not sound until the call has ended.
- The alarm will sound at the set time even when the ringer volume is turned off.
- If you select "Einmalig", the setting will change to "Aus" after the alarm sounds.

Ringer setup

Ringer volume

- 1 Press [OK].

- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select "Ruflautstärke", then press [▶].
- 5 Press [▲] or [▼] repeatedly to select the desired volume.
- 6 Press [▶].
- 7 Press [X].

Hinweis:

- Alarms will sound and the handset will ring for intercom calls and when paged even if the ringer is turned off.

Changing ringtones

You can change the ringtone used by the handset.

"Rufsignal ext.": Selects the ringtone for outside calls.

"Rufsignal int.": Selects the ringtone for intercom calls.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select the desired item, then press [▶].
- 5 Select the desired ringtone, then press [▶].
- 6 Press [X].

Hinweis:

- If you select one of the melody ringtones, the ringtone will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.
- The preset melodies in this product are used with permission of © 2004 M-ZoNE Co., Ltd.

Night mode

Night mode allows you to select a block of time during which the handset will not ring for outside calls. This feature is useful for times when you do not want to be disturbed, for example, while

Handset Settings

sleeping. Night mode can be set independently for the handset and the base unit (Seite 22). Using the phonebook's category feature (Seite 13), you can also select categories of callers whose calls will override night mode and ring the handset (Caller ID subscribers only). Set the date and time beforehand (Seite 9).

Setting the start and end time for night mode

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select "Nachtmodus", then press [▶].
- 5 Select "Start/Ende", then press [▶].
- 6 Enter the desired hour and minute you wish to start this feature by selecting 2 digits for each.
 - If you use 12-hour time entry, select "AM" or "PM" by pressing [✕] repeatedly before entering the time.
- 7 Enter the desired hour and minute you wish to end this feature by selecting 2 digits for each.
 - If you use 12-hour time entry, select "AM" or "PM" by pressing [✕] repeatedly before entering the time.
- 8 Press [OK].
- 9 Press [✕⓪].

Turning night mode on/off

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select "Nachtmodus", then press [▶].
- 5 Select "Ein/Aus", then press [▶].
- 6 Select "Ein" or "Aus", then press [▶].
- 7 Press [✕⓪].

Hinweis:

- When the night mode is turned on, "[N]" is displayed.

Setting the ring delay for night mode

This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset will ring, useful when someone urgently needs to speak with you. If you select "Kein Rufsignal", the handset will not ring during night mode.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select "Nachtmodus", then press [▶].
- 5 Select "Rufverzögerung", then press [▶].
- 6 Select the desired setting, then press [▶].
- 7 Press [✕⓪].

Selecting categories to bypass night mode

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Ruftoneinstell.", then press [▶].
- 4 Select "Nachtmodus", then press [▶].
- 5 Select "Kateg. Auswahl.", then press [▶].
- 6 Press the desired category numbers, then press [OK].
 - The selected category number will flash.
 - To cancel a selected category number, press the number again. The number will stop flashing.
- 7 Press [✕⓪].

Hinweis:

- If a call is received from one of the categories set to bypass night mode, only the handset will ring.

Handset Settings

Display setup

Selecting the standby mode display

"Basis Kennung": The current base unit number is displayed.

"Mobilt. -Nr.": The current handset number is displayed.

"Aus": Only the current date and time are displayed.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Display-Einst.", then press [▶].
- 4 Select "Display Anzeige", then press [▶].
- 5 Select the desired setting, then press [▶].
- 6 Press [X].

Hinweis:

- If "Basis Kennung" is selected and the current base unit number is 2, "-2-" is displayed.
- If "Mobilt. -Nr." is selected and the current handset number is 2, "[2]" is displayed.

Changing the display language

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Display-Einst.", then press [▶].
- 4 Select "Auswahl Sprache", then press [▶].
- 5 Select the desired language, then press [▶].
- 6 Press [X].

Hinweis:

- If you select a language you cannot read, press [X], [OK], press [▲] 2 times, press [▶], press [▼] 2 times, press [▶], press [▼], press [▶], select the desired language, then press [▶]. Press [X].

Changing the display contrast

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Display-Einst.", then press [▶].
- 4 Select "Kontrast", then press [▶].
- 5 Press [▲] or [▼] repeatedly to select the desired contrast, then press [▶].
- 6 Press [X].

Call options

Turning call bar on/off

This feature prohibits making outside calls. When call bar is turned on, only intercom calls and calls to emergency numbers (Seite 23) can be made.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Rufoptionen", then press [▶].
- 4 Select "Wahlsperre", then press [▶].
- 5 Enter "0000" (default handset PIN).
 - If you changed the PIN, enter it (Seite 20).
- 6 Select "Ein" or "Aus", then press [▶].
- 7 Press [X].

Hinweis:

- When call bar is turned on, ☒ is displayed.

Turning auto talk on/off

When this feature is turned on, you can answer calls simply by lifting the handset off the base unit. You do not need to press [X].

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Rufoptionen", then press [▶].
- 4 Select "Autom. Gespräch", then press [▶].
- 5 Select "Ein" or "Aus", then press [▶].
- 6 Press [X].

Handset Settings

Other options

Changing the handset PIN (Personal Identification Number)

For security, the handset PIN must be entered when changing certain settings. The default PIN is "0000".

Wichtig:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Andere Optionen", then press [▶].
- 4 Select "Mobilteil-PIN", then press [▶].
- 5 Enter the current 4-digit handset PIN.
- 6 Enter the new 4-digit handset PIN, then press [OK].
- 7 Press [X0].

Turning keytones on/off

Keytones are tones heard when keys are pressed. Includes confirmation tones and error tones.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Andere Optionen", then press [▶].
- 4 Select "Tastentöne", then press [▶].
- 5 Select "Ein" or "Aus", then press [▶].
- 6 Press [X0].

Hinweis:

- If keytones are turned off, error tones will not sound when you enter the wrong PIN or when memory is full.

Resetting the handset to its default settings

- 1 Press [OK].

- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Andere Optionen", then press [▶].
- 4 Select "MT zurücksetzen", then press [▶].
- 5 Enter "0000" (default handset PIN).
 - If you changed the PIN, enter it (Seite 20).
- 6 Select "Ja", then press [▶].
- 7 Press [X0].

Hinweis:

- The following items will be deleted or reset to their default settings:
 - Settings listed on Seite 16
 - Redial list
 - Voice enhancer
 - Category names
 - Category ringtones
- The following items will be retained:
 - Phonebook entries (category names and ringtones will be reset to their default settings.)
 - Date and time

Base Unit Settings

Guide to base unit settings

For your reference, a chart of all items which can be customised for the base unit is printed below.

- When customising the base unit, the current item or setting is indicated by ►.

Base unit settings menu	Sub-menu	Sub-menu 2	Default setting	Page
Ruftoneinstell.	Ruflautstärke		Medium	Seite 22
	Nachtmodus	Start/Ende	23:00/06:00	Seite 22
		Ein/Aus	Aus	Seite 22
		Rufverzögerung	60 Sek	Seite 22
Rufoptionen	Rückfrage		200 mSek	Seite 23
	Pausendauer		3 Sek	Seite 23
	Notrufnummer		112, 110	Seite 23
	Tarifmanager	Netzbetreiber	Aus	Seite 23
		Vorwahlnr.	—	Seite 24
	Wahlsperre		—	Seite 24
Andere Optionen	Basiseinh. PIN		0000	Seite 25
	Wiederholmodus		Aus	Seite 29
	Basis Zurückst.	Land	Deutschland	Seite 25

Hinweis:

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

Base Unit Settings

Ringer setup

Ringer volume

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Ruftoneinstell.", then press [▶].
- 5 Select "Ruflautstärke", then press [▶].
- 6 Press [▲] or [▼] repeatedly to select the desired volume.
- 7 Press [▶].
- 8 Press [X].

Night mode

Night mode allows you to select a block of time during which the base unit will not ring for outside calls. This feature is useful for times when you do not want to be disturbed, for example, while sleeping. Night mode can be set independently for the handset (Seite 17) and the base unit. Set the date and time beforehand (Seite 9).

Setting the start and end time for night mode

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Ruftoneinstell.", then press [▶].
- 5 Select "Nachtmodus", then press [▶].
- 6 Select "Start/Ende", then press [▶].
- 7 Enter the desired hour and minute you wish to start this feature by selecting 2 digits for each.
 - If you use 12-hour time entry, select "AM" or "PM" by pressing [X] repeatedly before entering the time.
- 8 Enter the desired hour and minute you wish to end this feature by selecting 2 digits for each.

- If you use 12-hour time entry, select "AM" or "PM" by pressing [X] repeatedly before entering the time.

- 9 Press [OK].

- 10 Press [X].

Turning night mode on/off

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Ruftoneinstell.", then press [▶].
- 5 Select "Nachtmodus", then press [▶].
- 6 Select "Ein/Aus", then press [▶].
- 7 Select "Ein" or "Aus", then press [▶].
- 8 Press [X].

Setting the ring delay for night mode

This setting allows the base unit to ring during night mode if the caller waits long enough. After the selected amount of time passes, the base unit will ring, useful when someone urgently needs to speak with you.

If you select "Kein Rufsignal", the base unit will not ring during night mode.

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Ruftoneinstell.", then press [▶].
- 5 Select "Nachtmodus", then press [▶].
- 6 Select "Rufverzögerung", then press [▶].
- 7 Select the desired setting, then press [▶].
- 8 Press [X].

Base Unit Settings

Call options

Changing the recall time

Change the recall time, if necessary, depending on the requirements of your service provider or PBX.

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Rufoptionen", then press [F2].
- 5 Select "Rückfrage", then press [F2].
- 6 Select the desired setting, then press [F2].
- 7 Press [F3].

Setting pause length

Change the pause length, if necessary, depending on the requirements of your service provider or PBX.

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Rufoptionen", then press [F2].
- 5 Select "Pausendauer", then press [F2].
- 6 Select the desired setting, then press [F2].
- 7 Press [F3].

Storing/changing emergency numbers

These settings determine which phone numbers can be dialled while the call bar feature is on (Seite 19).

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Rufoptionen", then press [F2].
- 5 Select "Notrufnummer", then press [F2].
- 6 Select a memory location, then press [F2].

- If the memory location already contains an emergency number, the number is displayed.

- 7 Enter/edit the number, then press [F1/OK].
 - To erase an emergency number, press and hold [C/Ø].
- 8 Press [F3].

ARS (Automatic Route Selection)

Different telephone carriers charge different rates for call to different areas. If you use different telephone carriers in an effort to save costs, automatic route selection can automatically dial the appropriate carrier code when you make calls to certain area codes according to the way you program this feature.

Wichtig:

- To use automatic route selection, you must:
 - store the carrier codes you use
 - store the area codes you want to call using a specific carrier code
 - assign a carrier code to each stored area code
- Contact your telephone carrier(s) for calling rates.

Beispiel: You have assigned carrier code "9876" to area code "123".

If you dial "123-4567", the unit dials "9876-123-4567".

Storing carrier codes for ARS (Turning ARS on)

Store the carrier codes of the telephone carriers you use. You can store up to 5 carrier codes.

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Rufoptionen", then press [F2].
- 5 Select "Tarifmanager", then press [F2].
- 6 Select "Netzbetreiber", then press [F2].
- 7 Select "Ein", then press [F2].
- 8 Select a carrier code location (C1 to C5), then press [F2].

Base Unit Settings

- If the location already contains a carrier code, the code is displayed.
- 9** Enter the carrier code (7 digits max.), then press **[OK]**.
- 10** Press **[X]**.

Storing area codes for ARS

Store the area codes which should be dialled using a specific carrier. You can store up to 25 area codes.

- 1** Press **[OK]**.
- 2** Select "Basis-Einstell.", then press **[▶]**.
- 3** Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4** Select "Rufoptionen", then press **[▶]**.
- 5** Select "Tarifmanager", then press **[▶]**.
- 6** Select "Vorwahlnr.", then press **[▶]**.
- 7** Select an area code location (1 to 25), then press **[▶]**.
 - If the location already contains an area code, the code is displayed.
- 8** Enter an area code (5 digits max.), then press **[OK]**.
- 9** Select a carrier code you stored (C1 to C5) earlier, then press **[▶]**.
 - This carrier code will be automatically dialled when you make a call to this area code.
- 10** Press **[X]**.

Turning ARS off

- 1** Press **[OK]**.
- 2** Select "Basis-Einstell.", then press **[▶]**.
- 3** Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4** Select "Rufoptionen", then press **[▶]**.
- 5** Select "Tarifmanager", then press **[▶]**.
- 6** Select "Netzbetreiber", then press **[▶]**.
- 7** Select "Aus", then press **[▶]**.
- 8** Press **[X]**.

Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets will be restricted. Storing area codes here will prevent the restricted handsets from dialling any phone number in that area code. If a restricted number is dialled, the call will not be connected and the restricted number will flash on the display.

- 1** Press **[OK]**.
- 2** Select "Basis-Einstell.", then press **[▶]**.
- 3** Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4** Select "Rufoptionen", then press **[▶]**.
- 5** Select "Wahlsperre", then press **[▶]**.
- 6** Set which handsets will be restricted by pressing the desired handset number.
 - All the registered handset numbers will be displayed.
 - Flashing numbers indicate call restriction is turned on for the corresponding handset.
 - To turn call restriction off for a handset, press the number again. The number will stop flashing.
- 7** Press **[OK]**.
- 8** Select a memory location, then press **[▶]**.
 - If the memory location already contains a restricted number, the number is displayed.
- 9** Enter the phone number or area code to be restricted (8 digits max.), then press **[OK]**.
 - To erase a restricted number, press **[C/X]**.
- 10** Press **[X]**.

Base Unit Settings

Other options

Changing the base unit PIN (Personal Identification Number)

For security, the base unit PIN must be entered when changing certain settings. The default PIN is "0000".

Wichtig:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it.
- 4 Select "Andere Optionen", then press [F2].
- 5 Select "Basiseinh. PIN", then press [F2].
- 6 Enter the new 4-digit base unit PIN, then press [F1/OK].
- 7 Press [F3/0].

Resetting the base unit to its default settings

- 1 Press [F1/OK].
- 2 Select "Basis-Einstell.", then press [F2].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Select "Andere Optionen", then press [F2].
- 5 Select "Basis Zurückst.", then press [F2].
- 6 Select "Deutschland", then press [F2].
- 7 Select "Ja", then press [F2].
- 8 Press [F3/0].

Hinweis:

- The following items will be deleted or reset to their default settings:
 - Settings listed on Seite 21
 - Caller list

- The following items will be retained:
 - Date and time
 - Repeater mode
- If you select "Österreich" as the country in step 6, the following default settings will be changed for Austria:
 - Recall time
 - Emergency number
 If you select "Österreich" in step 6 by mistake, repeat this procedure and select "Deutschland" in step 6.
- After resetting the base unit, you will not be able to make or receive calls for a few moments.

Caller ID Service

Using Caller ID service

Wichtig:

- This unit is Caller ID compatible. To use Caller ID features (such as displaying caller phone numbers), you must subscribe to Caller ID service. Consult your service provider for details.

Caller ID features

When an outside call is received, the caller's phone number can be displayed.

- Phone numbers of the last 50 different callers will be logged in the caller list.
- When caller information is received and it matches a phone number stored in the unit's phonebook:
 - The stored name will be displayed and logged in the caller list.
 - The handset will use the ringtone assigned to the caller's category.
- If the unit is connected to a PBX system, you may not receive the caller information.
- When the caller dialled from an area which does not provide Caller ID service, "Dienst ni.vorh." will be displayed.
- When the caller requested not to send caller information, either no information or "Keine Anrufinfo" will be displayed.

Missed calls

If a call is not answered, the unit treats the call as a missed call. The number of missed calls is shown on the display. This lets you know if you should view the caller list to see who called while you were out.

Call Waiting Caller ID

This is a service of your service provider and will only operate if you have subscribed to this service. When you hear a call waiting tone during a conversation, the display will show the second caller's information. You can answer the second call, keeping the first call on hold. Consult your service provider for details of this service.

Category features for Caller ID subscribers

Categories can help you identify who is calling by using different ringtones for different categories of callers. When adding an entry to the phonebook you can assign it to the desired category (Seite 13). When a call is received from a caller assigned to a category, the category's ringtone you select is used.

Changing category ringtones

You can select a ringtone for each category. If you select "Rufsignal ext.", the unit will use the external ringtone you set on Seite 17 when calls from this category are received. The default setting is "Rufsignal ext.".

- 1 Press [□], then press [■/OK].
- 2 Select "Kategorie", then press [▶].
- 3 Select a category, then press [▶].
- 4 Select the current setting of the category ringtone, then press [▶].
- 5 Select the desired ringtone, then press [▶].
- 6 Press [✕⓪].

Caller list

Viewing the caller list and calling back

Phone numbers of the last 50 different callers will be logged in the caller list. When the 51st call is received, the oldest caller information will be automatically erased. You can use this list to return missed calls.

- 1 Press [■/OK].
- 2 Select "Anruferliste", then press [▶].
 - The most recent call is displayed.
- 3 Press [▼] repeatedly to search from the most recent call, or press [▲] repeatedly to search from the oldest call.
 - If the item has already been viewed or answered, "✓" is displayed, even if it was viewed or answered using another handset.

Caller ID Service

- 4 Press [↶] or [↷] to call back the displayed party.

Editing a caller's phone number before calling back

- 1 Press [≡/OK].
- 2 Select "Anruferliste", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry.
- 4 **To add a number**
Press the dial key ([0] to [9]).
 - The number you pressed is added to the top of the current number.**To erase a number**
Press [≡/OK], select "Bearb. & Anrufen", then press [▶].
Press [◀] or [▶] to place the cursor on the number you wish to erase, then press [C/✕].
- 5 Press [↶] or [↷].

Erasing caller information

- 1 Press [≡/OK].
- 2 Select "Anruferliste", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry, then press [≡/OK].
- 4 Select "Löschen", then press [▶].
 - To erase all entries, select "Alle löschen", then press [▶].
- 5 Select "Ja", then press [▶].
- 6 Press [✕/0].

Storing caller information into the phonebook

- 1 Press [≡/OK].
- 2 Select "Anruferliste", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry, then press [≡/OK].
- 4 Select "Telbuch hinzuf.", then press [▶].
- 5 Continue from step 3, "Adding entries to the phonebook", Seite 13.

Multi-unit Operation

Operating additional units

Additional handsets

Up to 6 handsets can be registered to a single base unit. Additional handsets will give you the freedom to, for example, have an intercom call with another handset while a third handset is on an outside call. See Seite 4 for information on ordering additional handsets.

Wichtig:

- The additional handset model recommended for use with this unit is noted on Seite 4. If other model handset is used, certain operations (handset settings, base unit settings, etc.) may not be available.

Additional base units

Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "Automatisch" is selected on base unit selection (Seite 29), it will look for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell".

Hinweis:

- Calls will be disconnected when the handset moves from one radio cell to another.
- Intercom calls and call transfers are only possible between handsets in the same radio cell.

Registering a handset to a base unit

To register an additional handset to a base unit (easy registration)

The included handset and base unit are preregistered. After purchasing an additional handset, register it to the base unit. Ensure that the additional handset is switched on. If it is not on, press and hold [↻] for few seconds to turn the handset on.

- 1 Lift the additional handset and press [↻] to put the handset in standby mode.
- 2 Press and hold [↻] on the base unit for about 3 seconds, until the registration tone sounds.
- 3 Place the additional handset on the base unit. The registration tone continues to sound. With the handset still on the base unit, wait until a confirmation tone sounds and ⏏ stops flashing.

Hinweis:

- If an error tone sounds, or if ⏏ is still flashing, register the handset manually (manual registration; Seite 28).
- If all registered handsets start ringing in step 2, press [↻] to stop. Start again from step 1.
- Charge the batteries of your additional handset for about 7 hours before initial use.
- This registration method cannot be used for handsets that have already been registered to a base unit. Register the handset manually (manual registration; Seite 28).

To register a handset to an additional base unit (manual registration)

You can register a handset to a base unit manually using the following method.

- 1 Press [⏏/OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Registrierung", then press [▶] 2 times.
- 4 Select a base unit number, then press [▶].
 - This number is used by the handset as a reference only.
- 5 Press and hold [↻] on the base unit for about 3 seconds, until the registration tone sounds.
 - If all registered handsets start ringing, press [↻] to stop, then repeat this step.
 - After pressing [↻], the rest of this procedure must be completed within 1 minute.
- 6 Wait until "Basis PIN Eing." is displayed, then enter "0000" (default base unit PIN), then press [⏏/OK].

Multi-unit Operation

- If you changed the PIN, enter it (Seite 25).
- When the handset has been registered successfully, Ψ will stop flashing. If keytones are turned on (Seite 20), a confirmation tone will be heard.

Selecting a base unit

When "Automatisch" is selected, the handset will automatically use any available base unit it is registered to. When a specific base unit is selected, the handset will make and receive calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Auswahl Basis", then press [▶].
- 4 Select the desired base unit number, or "Automatisch", then press [▶].
 - The handset starts searching for the base unit.

Cancelling a handset

A maximum of 6 handsets can be registered to a base unit. A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This will allow the base unit to "forget" the handset.

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (Seite 25).
- 4 Enter "335".
- 5 Select "Mobilt. Löschen", then press [▶].
 - The numbers of all handsets registered to the base unit are displayed.
- 6 Select the handset(s) you want to cancel, by pressing the desired handset number.
 - The selected handset number(s) will flash.
 - To cancel a selected handset number, press the number again. The number will stop flashing.
- 7 Press [OK].

- 8 Select "Ja", then press [▶].

- 9 Press [X].

Cancelling a base unit

A handset can be registered to a maximum of 4 base units. A handset can cancel a base unit that it is registered to. This allows the handset to "forget" the base unit.

- 1 Press [OK].
- 2 Select "Mobilteileinst.", then press [▶].
- 3 Select "Registrierung", then press [▶].
- 4 Enter "335".
- 5 Select "Lösche Basis", then press [▶].
- 6 Enter "0000" (default handset PIN).
 - If you changed the PIN, enter it (Seite 20).
- 7 Select the base unit(s) you want to cancel, by pressing the desired base unit number.
 - The selected base unit number(s) will flash.
 - To cancel a selected base unit number, press the number again. The number will stop flashing.
- 8 Press [OK].
- 9 Select "Ja", then press [▶].
- 10 Press [X].

Hinweis:

- To register the handset to another base unit or to the same base unit again, see manual registration (Seite 28).

Increasing the range of the base unit

You can increase the range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on Seite 4. Consult your Panasonic dealer for details.

Wichtig:

- Before registering the repeater to this base unit, you must turn the repeater mode on.

Turning the repeater mode on/off

- 1 Press [OK].
- 2 Select "Basis-Einstell.", then press [▶].
- 3 Enter "0000" (default base unit PIN).

Multi-unit Operation

- If you changed the PIN, enter it (Seite 25).
- 4** Select “**Andere Optionen**”, then press [▶].
- 5** Select “**Wiederholmodus**”, then press [▶].
- 6** Select “**Ein**” or “**Aus**”, then press [▶].
- 7** Press [↵].

Hinweis:

- After turning repeater mode on/off, you will not be able to make or receive calls for a few moments.

Intercom between handsets

Intercom calls can be made between handsets in the same radio cell, but not between handsets in different radio cells.

Beispiel: When handset 1 calls handset 2

- 1 Handset 1:**
Press [INT] and [2] (desired handset number).
- 2 Handset 2:**
Press [↵] or [⏏] to answer.
- 3** When finished talking, press [↵].

Transferring calls between handsets

Outside calls can be transferred between 2 handsets in the same radio cell.

Beispiel: When handset 1 transfers a call to handset 2

- 1 Handset 1:**
During an outside call, press [INT] and [2] (desired handset number).
 - The outside call will be put on hold.
 - If there is no answer, press [INT] to return to the outside call.
- 2 Handset 2:**
Press [↵] or [⏏] to answer the page.
 - Handset 2 can talk with handset 1.
- 3 Handset 1:**
To complete the call transfer, press [↵].

Transferring a call without speaking to the other handset user


- 1** During an outside call, press [INT], then press the desired handset number.
 - The other handset rings if it is within range of the base unit and turned on.
- 2** Press [↵].
 - The outside call rings at the other handset.

Hinweis:

- 📞 flashes to indicate the outside call is on hold.
- If the other handset user does not answer the call within 1 minute, the call will ring at your handset again.


Useful Information

Wall mounting

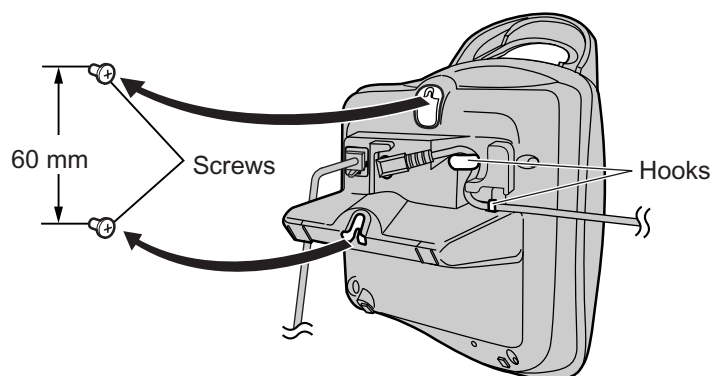

Hinweis:

- Make sure the screws are securely fastened to the wall.
- Do not pinch the telephone line cord and AC adaptor cord between the base unit and the wall.
- Use the following wall template to position the screws before drilling.

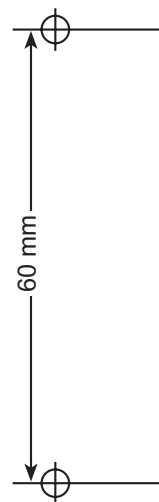

Useful Information

Available character entries

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The available character entry modes are, Alphabet, Numeric, Greek, Extended 1, Extended 2, and Cyrillic. When in Alphabet (ABC), Greek (ABΓ), Extended 1 (AĂĂ), Extended 2 (SŠŠ), or Cyrillic (AБB) character entry modes, you can select which character is entered by pressing a dial key repeatedly.

- When the unit displays the character entry screen:
 - Press [◀] or [▶] to move the cursor.
 - Press dial keys to enter characters and numbers.
 - Press [C/✕] to erase the character or number highlighted by the cursor. Press and hold [C/✕] to erase all characters or numbers.
 - Press [*/] to switch between uppercase and lowercase.
 - To enter another character located on the same dial key, press [▶] to move the cursor to the next space, then press the appropriate dial key.

Character entry modes

Several character entry modes are available. When the unit displays the character entry screen, press [□], then select a character entry mode, and press [▶]. The default mode is Alphabet.

Alphabet character table (ABC)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A B C 2 a b c 2	D E F 3 d e f 3	G H I 4 g h i 4	J K L 5 j k l 5	M N O 6 m n o 6	P Q R S 7 p q r s 7	T U V 8 t u v 8	W X Y Z 9 w x y z 9

Numeric entry table (0-9)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
0	1	2	3	4	5	6	7	8	9

Greek character table (ABΓ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A B Γ 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π P Σ 7	T Υ Φ 8	X Ψ Ω Ξ 9

Useful Information

Extended 1 character table (AĂÄ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A Ä Á Â Ã Ä Å Æ B C Ç 2	D E È É Ê Ë Ë F 3	G Ğ H I Ì Í Î Ï 4	J K L 5	M N Ñ O Ò Ó Ô Õ Ö ø 6	P Q R S Ş 7	T U Û Ú Ü Ü Û V 8	W Ŵ X Y Ŷ Z 9
		a à á â ã ä å æ b c ç 2	d e è é ê ë ë f 3	g ğ h i ì í î ï 4	j k l 5	m n ñ o ò ó ô õ ö ø 6	p q r s ş 7	t u ù ú û ü ü v 8	w ŵ x y ŷ z 9

- The following are used for both uppercase and lowercase:

ø Ş Ŵ Ŷ

Extended 2 character table (ŠŠŠ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A Á Ą Ą B C Ć Č 2	D Ď E É Ě ě F 3	G H I Í 4	J K L Ł Ł Ł 5	M N Ń Ń O Ó Ö Ö 6	P Q R Ŕ Ř S Š Š 7	T Ť U Ú Ü Ů ů V 8	W X Y ŷ Ý Z Ž Ž Ž 9
		a á ä Ą b c Ć Č 2	d ě e é ě ě f 3	g h i Í 4	j k l Ł Ł Ł 5	m n Ń ň o ó ö ö 6	p q r Ŕ ř s Š Š 7	t ť u ú ű ů ů v 8	w x y ŷ ý z ž ž ž 9

- The following are used for both uppercase and lowercase:

Ą Ć Č Ě Ł Ł Ł Ń Ř Š Š ů ŷ Ž Ž Ž

Cyrillic character table (АБВ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0 Г Є І Ї Ÿ	Space # & ' () * , - . / 1	А Б В Г 2	Д Е Ж З 3	И Ы К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9

Useful Information

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the AC adaptor and turn off the handset, then reconnect the AC adaptor and turn on the handset.

Initial settings

Problem	Cause & solution
Y is flashing.	• The handset is not registered to the base unit. Register it (Seite 28). • The handset is too far from the base unit. Move closer. • The AC adaptor is not connected. Check the connections.
The handset display is blank.	• The handset is not turned on. Turn the power on (Seite 9).
The handset will not turn on.	• Make sure that the batteries are installed correctly (Seite 8). • Fully charge the batteries (Seite 8). • Clean the charge contact and charge again (Seite 8).

Useful Information**Telephone**

Problem	Cause & solution
I cannot make or receive calls.	• The AC adaptor or telephone line cord is not connected. Check the connections. • If you are using a splitter to connect the unit, remove the splitter and connect the unit to the wall socket directly. If the unit operates properly, check the splitter. • Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider. • The call bar feature is turned on. Turn it off (Seite 19). • You dialled a call restricted number (Seite 24). • The key lock feature is turned on. Turn it off (Seite 11).
The unit does not ring.	• The ringer volume is turned off. Adjust the handset ringer volume (Seite 17) and the base unit ringer volume (Seite 22). • The night mode feature is turned on. Turn it off (Seite 17, 22).
The batteries should be charging but the battery icon does not change.	• Clean the charge contact and charge again (Seite 8). • The AC adaptor is disconnected. Plug in the AC adaptor.
A busy tone is heard when  is pressed.	• The handset is too far from the base unit. Move closer and try again. • Another handset is on an outside call. Wait for the other user to complete the call.
Static is heard, sound cuts in and out. Interference from other electrical units.	• Locate the handset and the base unit away from other electrical appliances. • Move closer to the base unit.
The handset stops working while being used.	• Disconnect the AC adaptor and turn off the handset. Connect the AC adaptor, turn on the handset and try again.
While storing an entry in the phonebook or assigning a one touch dial, the handset starts to ring.	• A call is being received. To answer the call, press . Programming will be cancelled. Start again.
Pressing  does not display/dial the last number dialled.	• The redialled number was more than 24 digits long. Redial the number manually.
The handset beeps intermittently and/or  flashes.	• Fully charge the batteries (Seite 8).
I fully charged the batteries, but  still flashes.	• Clean the charge contact and charge again (Seite 8). • It is time to replace the batteries (Seite 9).
Caller information is not displayed.	• You must subscribe to Caller ID service.

Useful Information

Problem	Cause & solution
While viewing caller information, the display returns to standby mode.	• Do not pause for over 1 minute while searching.
I cannot register a handset to a base unit.	• The maximum number of base units (4) are already registered to the handset. Cancel unused base unit registrations from the handset (Seite 29). • The maximum number of handsets (6) are already registered to the base unit. Cancel unused handset registrations from the base unit (Seite 29). • You entered the wrong PIN number. If you forget your PIN, consult your nearest Panasonic service centre. • Locate the handset and the base unit away from other electrical appliances.

Useful Information

Specifications

■ **Standard:**

DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile)

■ **Number of channels:**

120 Duplex Channels

■ **Frequency range:**

1.88 GHz to 1.9 GHz

■ **Duplex procedure:**

TDMA (Time Division Multiple Access)

■ **Channel spacing:**

1,728 kHz

■ **Bit rate:**

1,152 kbit/s

■ **Modulation:**

GFSK (Gaussian Frequency Shift Keying)

■ **RF transmission power:**

Approx. 250 mW

■ **Power source:**

220–240 V, 50 Hz

■ **Power consumption, Base unit:**

Standby: Approx. 3.5 W

Maximum: Approx. 9.2 W

■ **Operating conditions:**

5 °C–40 °C, 20 %–80 % relative air humidity
(dry)

■ **Dimensions:**

Base unit: Approx. 111 mm × 121 mm × 123 mm

Handset: Approx. 148 mm × 48 mm × 32 mm

■ **Mass (weight):**

Base unit: Approx. 200 g

Handset: Approx. 130 g

Hinweis:

- Specifications are subject to change.
- The illustrations used in these operating instructions may differ slightly from the actual product.

Provision of frequencies for general use

Als Zulassungsinhaber dieses DECT Schnurlostelefons sind wir verpflichtet, gemäß der Amtsblattverfügung 145/1998 Ihnen folgende Hinweise zu geben.

1. Dieses System besteht aus ortsfesten und mobilen Funkstellen.
2. Schnurlose Telekommunikationsanlagen können als Endeinrichtungen an öffentliche Telefonnetze angeschlossen werden.
3. Für diese Schnurlose Telekommunikationsanlage gibt es eine Allgemeinzuteilung für den Frequenzbereich, in dem es ausschließlich betrieben werden darf:

System DECT 1880 — 1900 Mhz

4. Diese Allgemeinzuteilung gilt zunächst für einen Zeitraum von 10 Jahren und wird in Abhängigkeit von der europäischen Harmonisierung fortgeschrieben.



Useful Information

Guarantee

Bitte bewahren Sie diesen Geräte-Schein zusammen mit Ihrem Kaufbeleg auf!

Panasonic Deutschland leistet

24 Monate kostenlose Fehlerbeseitigung

ab Kaufdatum dieses Gerätes:

Modell:





Serien-Nummer:

Name und Anschrift des Käufers:

Kaufdatum:

Stempel des Händlers:

Durch den Stempel und die Unterschrift des Fachhändlers wird die Richtigkeit der vorstehenden Eintragungen gegenüber Panasonic Deutschland bestätigt.
Ohne Stempel, Unterschrift des Händlers und Kaufdatum ist dieser Geräteschein ungültig.



Free Troubleshooting

1. Wird das Gerät aufgrund von nachgewiesenen Fabrikations- oder Materialfehlern in den ersten 24 Monaten ab Kaufdatum schadhaft, so behebt Panasonic Deutschland diesen Fehler kostenlos gemäß den nachfolgenden Bedingungen.
2. Die Beseitigung des Fehlers erfolgt nach Wahl von Panasonic Deutschland durch Reparatur oder Austausch. Ausgetauschte Teile und Geräte gehen in das Eigentum von Panasonic Deutschland über. Weitere Ansprüche gegen Panasonic Deutschland, insbesondere auf Rückgabe der Ware gegen Kaufpreiserstattung, Kaufpreisminderung oder Schadensersatz werden hierdurch nicht begründet.
3. Falls das Gerät zum Zwecke der Fehlerbeseitigung transportiert wird, geschieht dies auf Gefahr und Kosten des Absenders.
4. Ausgenommen von der kostenlosen Fehlerbeseitigung sind:
 - a) Schäden und Verluste, die durch das Gerät oder seinen Gebrauch entstehen, sowie Schäden die auf lokale Verhältnisse, wie Fehler in der Installation, Brand, Blitzschlag, äußere Gewalteinwirkung etc. zurückzuführen sind.
 - b) Schäden durch Eingriffe von Personen, die von uns hierzu nicht ermächtigt sind.
 - c) Geräte, bei denen die Fabrikationsnummer entfernt oder zerstört worden ist.
 - d) Schäden durch Nichtbeachtung der Bedienungsanleitung, z.B. Anschluß an eine falsche Netzspannung oder Stromart, und Schäden durch fahrlässige Behandlung oder Missbrauch.
 - e) Batterien, einschließlich Folgeschäden durch den Gebrauch von überalterten oder defekten Batterien.
 - f) Verschleißteile.
5. Tritt ein Fehler auf, wenden Sie sich bitte innerhalb der Frist von 24 Monaten ab Kaufdatum an
 - den Fachhändler, bei dem Sie das Gerät gekauft haben
 - das Panasonic Service-Center für Schnurlos-Telefone (siehe oben)
6. Um die kostenlose Fehlerbeseitigung in Anspruch nehmen zu können, muss der vollständig vom Händler ausgefüllte Geräteschein und/oder der Kaufbeleg vorgelegt werden.
7. Die kostenlose Fehlerbeseitigung durch Panasonic Deutschland bedeutet weder eine Verlängerung noch einen Neubeginn der 24-Monatsfrist. Der Anspruch auf kostenlose Fehlerbeseitigung durch Panasonic Deutschland bezieht sich lediglich auf den Erstkäufer und ist nicht übertragbar.
8. Selbstverständlich können Sie diese Leistungen auch in Anspruch nehmen, wenn Sie das Gerät in andere Länder des Europäischen Wirtschaftsraums verbringen. Bitte wenden Sie sich dort an die nationale Vertriebsgesellschaft.

Diese Leistungen bestehen zusätzlich zu der gesetzlichen Sachmängelhaftung des Händlers aus dem Kaufvertrag und beeinträchtigt in keiner Weise Ihre Rechte als Endgebraucher.

Panasonic Deutschland

Useful Information

End-User Hotline for Use-related and General Queries

0180 - 501 51 42 (0,12 € / Minute)



Mo.-Fr. 8.00 -20.00 Uhr
Sa. 12.00 -17.00 Uhr

Spezialisten leisten schnelle Hilfe, wenn bei der Einrichtung und Bedienung des Modells Fragen oder Probleme auftauchen sollten.

Der 48-Stunden-Reparatur-Service

Nutzer eines DECT-Schnurlos-Telefons von Panasonic können den 48-Stunden-Reparatur-Service in Anspruch nehmen. Ist ein Gerät defekt, genügt ein Anruf bei der Hotline für Reparaturanfragen. Der Besitzer kann das defekte Telefon dann direkt an das Panasonic Service-Center schicken und erhält es innerhalb von 48 Stunden repariert zurück. Während der Garantiezeit ist dieser Service kostenlos.











Hotline für Reparaturanfragen

0180 - 525 13 67 (0,12 € / Minute)

Index



- A** Alarm: 17
Answering calls: 11
ARS (Automatic Route Selection): 23
Area codes: 24
Carrier codes: 23
Auto talk: 11, 19
- B** Base unit
Additional base units: 28
Cancelling: 29
PIN: 25
Resetting: 25
Selecting: 29
Settings: 21
Battery
Charge: 8
Installation: 8
Life: 9
Replacement: 9
Strength: 8
- C** Call bar: 19
Caller ID service: 26
Call restriction: 24
Category: 13
Ringtones: 26
Chain dial: 14
Character entry: 32
Connections: 7
- D** Date and time: 9
Display
Contrast: 19
Icons: 6
Language: 19
Standby mode: 19
- E** Emergency numbers: 23
- H** Handset
Additional handsets: 28
Cancelling: 29
Locator: 12
PIN: 20
Power on/off: 9
Registration: 28
Resetting: 20
Settings: 16
- I** Intercom: 30
- K** Key lock: 11
Keytones: 20
- M** Making calls: 10
Missed calls: 26
Mute: 11
- N** Night mode
Base unit: 22
Handset: 17
- O** One touch dial: 14
- P** Pause: 11, 23
Phonebook: 13
Copying: 15
Editing: 14
Erasing: 14
Making calls: 13
Storing: 13
PIN
Base unit: 25
Handset: 20
Power on/off: 9
- R** Recall: 11, 23
Redialling: 10
Redial list: 10
Registration: 28
Repeater: 29
Ringtones: 17
- S** Speakerphone: 10
- T** Transfer calls: 30
- V** Voice enhancer: 11
Volume
Receiver: 10
Ringer (Base unit): 22
Ringer (Handset): 17
Speakerphone: 10
- W** Wall mounting: 31







Enquiry Hotline Tel. No.: 0180 - 501 51 42
Repair Hotline Tel. No.: 0180 - 525 13 67



CE0436

1999/5/EC

Sales Department:
Panasonic Deutschland
Winsbergring 15, 22525 Hamburg.

Panasonic Communications Zhuhai Co., Ltd.
3 Ping Xi 8 Lu, Nanping Keji Gongye Yuan, Zhuhai, Guangdong, China 519060

Copyright:
This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.

PQQX14522ZA CC0105FM0

